

Pin Assignment

Description	WDS-40-MT19-P	WDS-80-MT33-P	WDS-130-MT56-P
Input+	Red		Brown
Ground	Black		Orange
Signal	Yellow		Red

Fig. 1 Table of pin assignments

Electrical Data

Potentiometer output	WDS-40-MT19-P	WDS-80-MT33-P	WDS-130-MT56-P
Input voltage	max. 30 VDC		
Resistance	5 kOhm $\pm 5\%$	5 kOhm $\pm 20\%$	
Recommended contact current	$\leq 1 \mu\text{A}$		
Temporary contact current	10 mA		

Fig. 2 Table of electrical data

Draw-wire displacement sensors with potentiometer output are connected according to the table, see above. Use any potentiometer only when switched to voltage divider. Using it as a variable resistor destroys the component. Observe maximum contact currents.

i Use potentiometers only as voltage dividers, not as variable series resistors!

You can download a PDF of detailed operating instructions from our website:

<http://www.micro-epsilon.de/download/manuals/man--wireSENSOR-MT-Serie-com.pdf>

MICRO-EPSILON MESSTECHNIK GmbH & Co. KG
Königbacher Straße 15
94496 Ortenburg / Germany
Tel. +49 8542 / 168-0 / Fax +49 8542 / 168-90
e-mail info@micro-epsilon.de
www.micro-epsilon.com

X9771401-A011049HDR



Guiding and Attaching the Wire

If the measuring wire must be pulled out of the sensor to guide the wire or attach it to the measured object:

- the sensor must not be held by a second person during that process,
- the measuring wire must not be pulled out beyond the measuring range listed,
- the area around the sensor must be protected against snapping of the measuring wire.

➔ Attach the measuring wire to the measured object using a lifting loop.

➔ Guide the measuring wire vertically out of the sensor housing.

Diagonal pull is only permitted up to 3 degrees.

If you drag the measuring wire over the insertion hole or other objects, the measuring wire will be damaged and/or tear.

➔ Guide the measuring wire in a protected area so that it cannot get caught or otherwise be damaged.

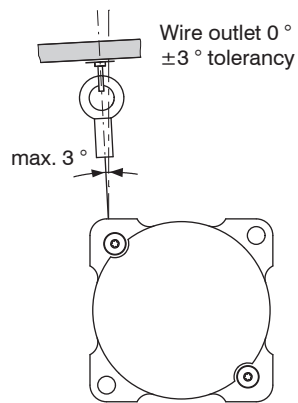


Fig. 3 Attachment and maximum diagonal pull of the measuring wire

Declaration of Incorporation

Declaration of Incorporation according to EC Machinery Directive 2006/42/EC, Annex II, Part B

The manufacturer and person authorized to compile the relevant technical documents

MICRO-EPSILON MESSTECHNIK GmbH & Co. KG
Königbacher Straße 15, 94496 Ortenburg / Germany

hereby declare that the machine designated below complies with the relevant fundamental health and safety requirements of the EC Machinery Directive, including modifications to it applicable at the time of this declaration, based on its design and construction and in the version put on the market by us - to the extent that the scope of supply allows.

Machine design: Draw-wire sensor
Type designation: WDS-xxx, WPS-xxx

The following fundamental health and safety requirements according to Annex I of the directive specified above have been applied and complied with:

- No. 1.1.2. Principles of safety integration
- No. 1.7.3. Marking of machinery
- No. 1.7.4. Operating instructions

Furthermore, we declare compliance with the following directives and standards including the modifications applicable at the time this declaration is made:

- Directive 2006/42/EC (machinery)
 - EN ISO 13857:2008 Safety of machinery - Safety distances to prevent hazard zones being reached by upper and lower limbs
 - EN 60204-1: 2006 + EN 60204-1: 2006/A1: 2009 Safety of machinery - Electrical equipment of machines - Part 1: General requirements
- Directive 2014/30/EU (EMC)
 - EN 61326-1: 2013 Electrical equipment for measurement, control and laboratory use - EMC requirements - Part 1: General requirements
 - EN 61326-2-3: 2013 Electrical equipment for measurement, control and laboratory use - EMC requirements - Part 2-3: Particular requirements - Test configuration, operational conditions and performance criteria for transducers with integrated or remote signal conditioning
- Directive 2011/65/EU (RoHS)
 - EN 50581: 2012 Technical documentation for the assessment of electrical and electronic devices with respect to the restriction of hazardous substances

We also declare that the special technical documentation for this partially completed machine has been created in accordance with Annex VII, Part B, and commit ourselves to disclose this to the market surveillance authorities upon request.

The commissioning of these partially completed machines is prohibited until the partially completed machine(s) has/have been installed in a machine that meets the requirements of the EC Machinery Directive and for which an EU Declaration of Conformity according to Annex II, Part A exists.

Ortenburg, April 9th 2019

Dr. Thomas Wisspeintner
Managing Director



MICRO-EPSILON

Assembly instructions
wireSENSOR
WDS series
MT19/MT33/MT56



Warnings

- Do not open the sensor housing.
 - Do not pull or loop the measuring wire around unprotected body parts.
 - Do not pull out the measuring wire beyond the measuring range listed.
 - Do not let the measuring wire snap.
- > Risk of injury
- Do not damage the measuring wire.
 - Do not oil or grease the measuring wire.
 - Do not kink the measuring wire.
 - Do not pull the measuring wire diagonally.
 - Do not let the measuring wire drag around objects.
 - Attach the measuring wire to the measured object while the wire is retracted.
- > Damage to or destruction of the sensor

Sensor Mounting

Install the sensor according to the information in the table below:

Model	Screws ¹	Threaded holes (on sides)	1) For through-hole
WDS-40-MT19-P	2 x M2	-	
WDS-80-MT33-P	2 x M3	8 x M2.5; depth 5 mm	
WDS-130-MT56-P	2 x M4	8 x M3; depth 6 mm	

The sensor does not have to be oriented in a special way.

Select the installation position in such a way that damage to or contamination of the measuring wire is avoided.

If possible, prefer an installation position in which the measuring wire exits downward. This prevents liquids from entering the measuring wire outlet.

Proper Environment

- Sensor protection class: IP 50
- Temperature range
 - Operation: -40 to +85 °C (-40 ... +185 °F)
 - Storage temperature: -40 to +85 °C (-40 ... +185 °F)
- Humidity: 5 - 95 % (non-condensing)
- Ambient pressure: Atmospheric pressure

Dimensional Drawings

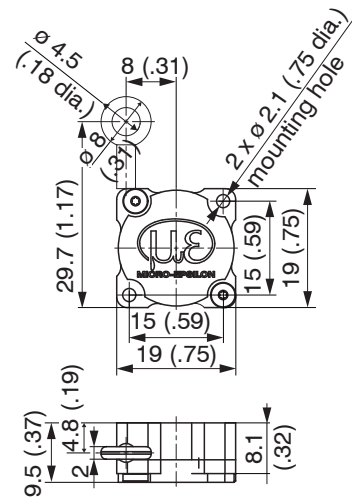


Fig. 4 Dimensional drawing WDS-40-MT19-P, dimensions in mm, not to scale

Installation Options

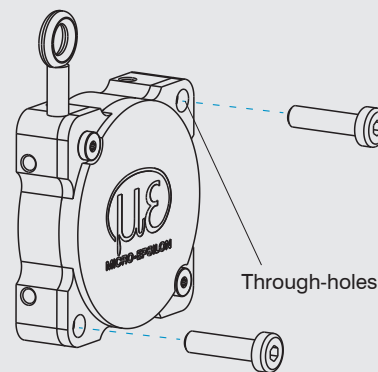


Fig. 5 Horizontal installation via through-holes

If the device is installed with the wire outlet at an infinitely variable angle, mounting the sensor with only one screw and then rotating it around that screw may be sufficient, if the basic conditions are suitable for such an installation.


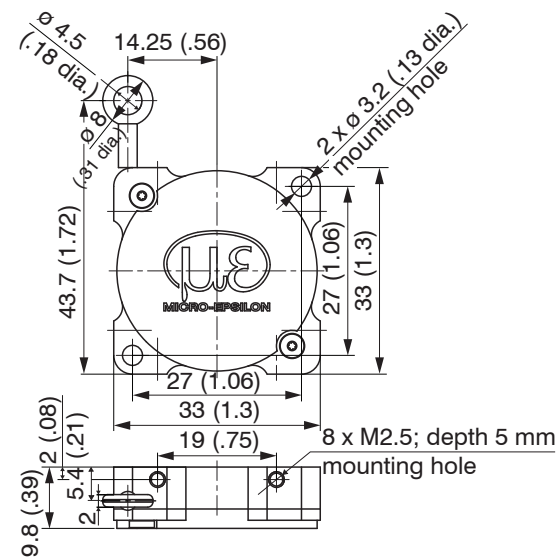


Fig. 7 Dimensional drawing WDS-80-MT33-P, dimensions in mm, not to scale

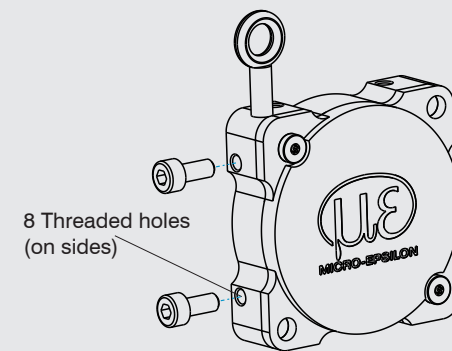

Additional installation options are available in the operating instructions, in the Appendix under Accessories.

Fig. 6 Vertical installation via threaded side holes

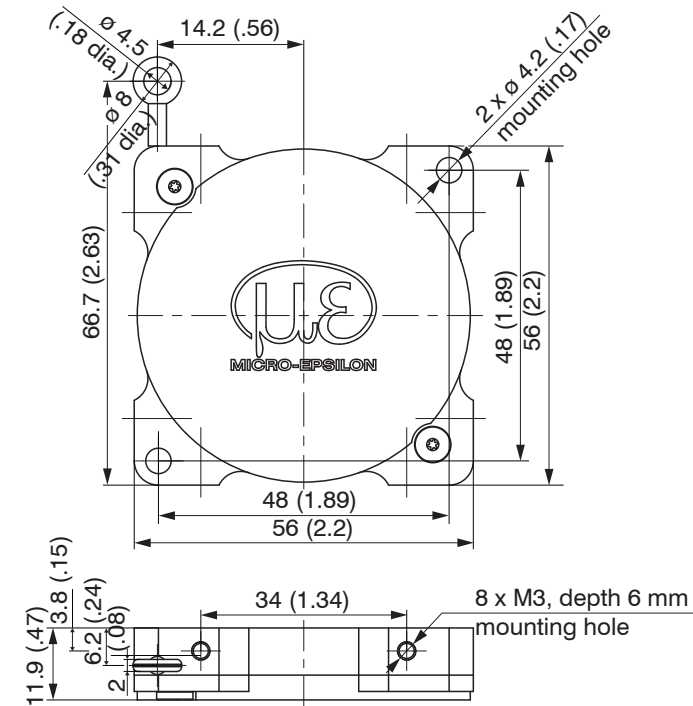


Fig. 8 Dimensional drawing WDS-130-MT56-P, dimensions in mm, not to scale